


INTELLIGENT FURNITURE LOCK SMART COMBINATION LOCK

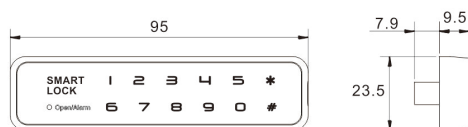

USER MANUAL

The factory setting user code is 1234, the factory setting management code is 543215. The system support 1 owner key and 3 management key. There are three modes: automatic, manual and public mode.

1.To open:

Enter the correct user code or management code and press “#” to conform, two beeps sound, green light turns on, as indicates the lock is opened.

You can press “*” to delete the wrong input when entering the code.

2.To Lock:

In case the lock is in automatic mode, the latch will protrude automatically within 4 seconds.

In case the lock is in manual mode, press “#” to lock the door.

In case the lock is in public mode, input your user code and press “#” to lock the door, and the user code is changed.

3.To change user code(for automatic and manual mode):

(1)Press “*” for 2 seconds(for F025, press “5”), red light turns on.

(2)Enter original user code or management code, press “#” to confirm.

(3)Enter “1#”.

(4)Enter your new user code (1 to 10 digits) and press “#” to confirm.

(5)Enter your new user code again, then press “#” to confirm.

(6)Red light turns off, as indicates the user code has been successfully changed.

4.To change management code:

(1)Press “*” for 2 seconds(for F025, press “5”), red light turns on.

(2)Enter original management code, press “#” to confirm.

(3)Enter “2#”.

(4)Enter your new management code (1 to 10 digits) and press “#” to confirm.

(5)Enter your new management code again, then press “#” to confirm.

(6)Red light turns off, as indicates the management code has been successfully changed.

5.To change mode:

There are 3 modes: automatic mode, manual mode and public mode.

(1)Press “*” for 2 seconds(for F025, press “5”), red light turns on.

(2)Enter management code, press “#” to confirm.

(3)Enter “3#”.

(4)Enter “1#” to set to automatic mode, or enter “2#” to set to manual mode, or enter “3#” to set to public mode.

(5)Red light turns off, as indicates the mode has been successfully set.

6.To recover to factory setting code:


Press the button through the hole on the lock body for 4 seconds, 4 beeps sound, now the user code is recovered to 1234, and the management code is recovered to 543215.

7.To change the batteries:


After using for some time, after opened, 6 beeps sound with red light flashing 6 times, as indicates low battery, please change the batteries as soon as possible, please use USB port to provide power to open.

8. In case of you forget the code, please use management code.

COMPONENT

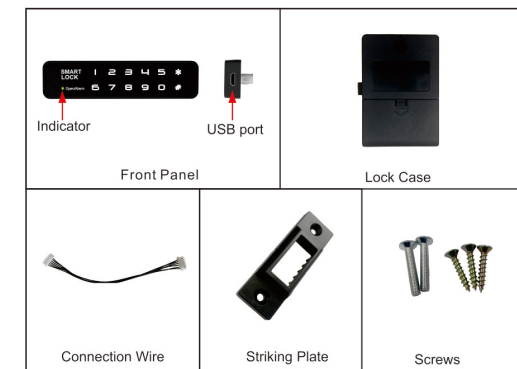

Installation Ceiling Panel

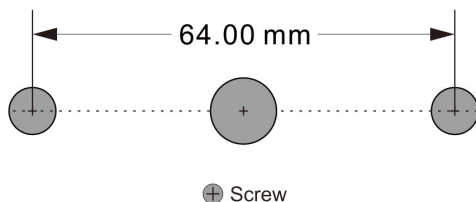



Cut off the page and paste it on the door,
then drill the hole according to the drawing

Installation Instruction

There are two different way to install the front panel -- integrative installation and standalone installationstandalone installation

Step 1 To install the front panel and lock case

wire connection

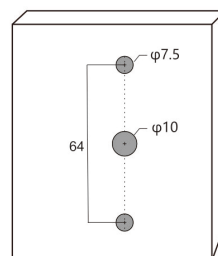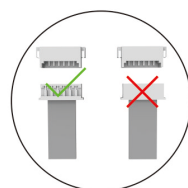

Picture 1

INSTALLATION INSTRUCTION


1) Paste the drawing on the door at proper height, the distance is 40MM between centre hole and opening wall, then drill the hole accordingly. See picture 1

2) Insert connecting wire (See Picture 2) into front panel, then wire goes through the centre hole; Next Insert the wire (See Picture 2) into the lock case


3) Fix up the front panel and lock case by screw M4X18

Step 2 install the striking plate

Fix up the striking plate by screw ST3.5X20. Make sure it can catch the latch of lock case and lock the door. The distance is approx. 20.5MM

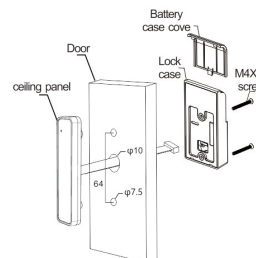

Picture 2

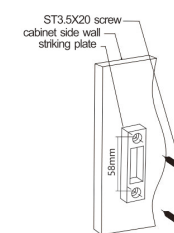

Picture 3

Standalone installation


1) Paste the drawing on the door at proper height, then drill the hole accordingly. See picture 1

2) Insert connecting wire (See Picture 4) into front panel, then wire goes through the centre hole; Fix up the front panel by screw M4X16 and washer.


3) Insert connection wire (See Picture 4) into lock case, then fix up by screw ST3.5X16MM. Make sure the distance is 40MM between the centre of lock case and opening wall

Step 2 Install the striking plate

Fix up the striking plate by screw ST3.5X20. Make sure it can catch the latch of lock case and lock the door. The distance is approx. 20.5MM

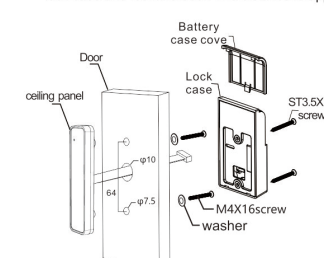

Picture 4

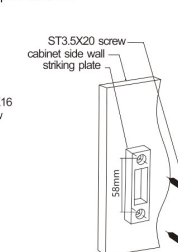

Picture 5